



Installation Guidelines
Securing Wishbone BayView bench to a concrete pad
Concrete Anchor Option
(Aug 2012)

1. Place the bench in position on the concrete pad, then mark the holes with a felt pen.




Required Tools and Materials

- ✓ Concrete hammer drill
- ✓ 1/2" concrete drill bit
- ✓ Hammer
- ✓ Air compressor
- ✓ Measuring tape
- ✓ 7/32" allen key
- ✓ Felt marker
- ✓ Paint pen

It is best to have 2 people to install a bench or table.

2. Remove the bench from the pad.
3. Set the depth of the drill bit to the length of the anchor using tape on the drill bit.

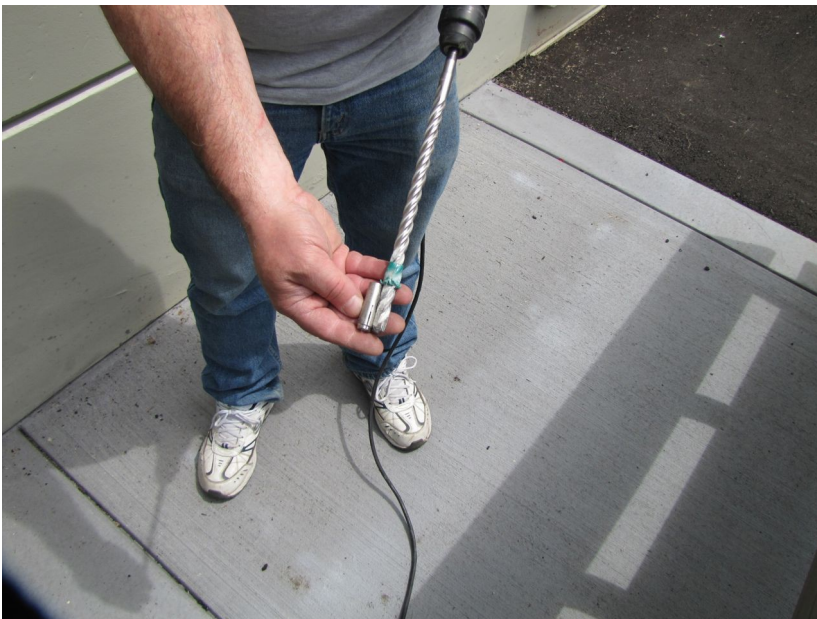

4. Pre-punch the marked hole location – this will ensure the drill bit doesn't wander.



5. Drill the holes to a depth of 1-5/8" (as suggested by the anchor manufacturer).



6. Blow out the holes to remove all the concrete dust and debris.



7. Insert concrete anchor.



8. Hammer the anchor with the supplied post to expand the base securing it to the concrete.



9. Position bench on concrete pad, line up holes, ensure no debris enters the threaded holes.



10. Secure bench to the anchor with bolt supplied.



11. Paint the top of the fastener with a color to match the bench. Paint pens work best.



12. Take a few moments to enjoy the view and the comfort of the bench !!

