


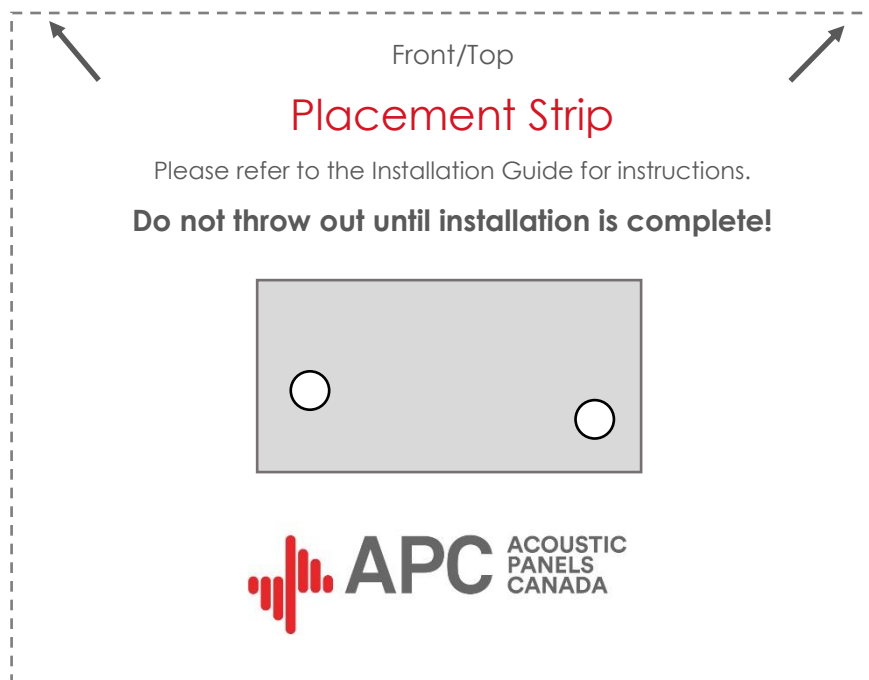

1. Cut along the outer dashed line to create the placement strip. Once cut, it should measure 4½" wide by 3½" tall.
2. Follow the complete Wall Mount instruction sheet.

